

FINAL PREPARATION

SCREENING THE FLOOR

These final steps are necessary for best "Professional" appearance.

Slowly lower the floor buffer with a white nylon pad attached over a 120-Grit sanding screen. Keeping the buffer balanced, sand the entire floor in the direction of the wood grain, overlapping your passes by four inches, as you work your way to the wall behind you. Remove screen and shake out sawdust as it becomes clogged.

Hand scrape and fine sand areas that the power sander was not able to reach. Vacuum the entire room thoroughly, especially around windows, sills, doors, and door frames. Inspect the floor. Hand sand any imperfections and swirl marks that may remain.

Follow the manufacturer's recommendations and guidelines for applying your floor finish.

INSTRUCTIONS FOR LIGHTLY REFINISHING WOOD FLOORS

NOTE: Hardwood floors need only be power sanded if the wood is damaged, cupped or curled. For refinishing floors with slight wear in the finish (traffic pattern wear), please use the following guidelines.

Sand floor with a rotary or orbital buffer and an 80-Grit mesh screen. It is not necessary to remove all of the finish; however, the floor should be uniformly smooth. Continue moving machine back and forth in the direction of the wood grain, working toward the wall behind you. Remove and shake out screen when it becomes clogged.

Vacuum entire floor. Screen sand floor again with a 100- or 120-Grit mesh screen. Hand sand or scrape corners. Vacuum one final time (entire floor as well as around windows, sills, doors, etc.). Apply finish coating following the manufacturer's recommendation.

Be sure to ask your rental store representative for a copy of the "Finishing or Refinishing Wood Floors" video to help with your project.



Expanding Drum Sander



Orbital Sander



Edger Sander



Drum Sander



Rotary Floor Buffer

VIRGINIA ABRASIVES™

2851 Service Road
Petersburg, VA 23805 • Simi Valley, CA
800.446.1805 • Fax: 800.422.5336
www.virginiaabrasives.com

Your local rental store

The Complete Do-It-Yourself Floor Sanding Guide.

BEAUTIFUL WOOD FLOORS MADE EASY



VIRGINIA ABRASIVES™

SANDING THE FLOOR

EQUIPMENT NEEDED

1. Drum Floor Sander or Orbital Sander
2. Edger Disc Sander
3. Rotary Floor Buffer/Maintainer
4. Vacuum
5. Sandpaper (fine, medium, coarse)
6. Grade 120 Mesh Screen Disc with Pad
7. Hammer and Nail Set
8. Pry Bar
9. Hand Scraper
10. Dust Mask, Safety Glasses, Ear Plugs

CAUTION


1. Sanding dust is extremely combustible.
2. Never smoke or have open flames present while sanding or applying finish.
3. Empty sander dust bags frequently into container. Store container outside of job site to prevent possible fire hazard.
4. Unplug sanding equipment when not in use or when changing paper.
5. NEVER mix discarded stain or finish rags with waste sawdust, spontaneous combustion can occur.

HELPFUL HINTS

1. Check fuse supply as machine may overload circuit.
2. Remove furniture, rugs, curtains, pictures and any other conveniently removed items.
3. Complete wall covering and painting projects prior to refinishing floors.
4. Provide adequate ventilation during sanding and refinishing.
5. If the room has a large doorway, cover it with a dropcloth or plastic covering. Stuff towels or rags under bottoms of exit or closet doors. Cover all air vents.
6. NEVER stop the sander with the drum in contact with the floor.
7. Wear clean, soft footwear to avoid dirt marks and scratching.

PREPARING THE FLOOR

1. Remove quarter round molding or baseboard for a professional touch. Use a small wooden wedge between the wallboard and the pry bar to prevent damaging the wallboard.
2. Repair or replace loose boards by gluing and nailing.
3. Counter-sink all protruding nail heads with nail set.
4. Vacuum or sweep the floor.

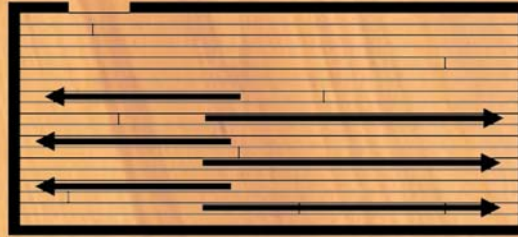

NEW FLOORS

Recently installed or slightly worn

FIRST SANDING: (Medium Abrasive, 36-Grit) Install sandpaper per machine manufacturer's instructions (*snug, not too tight or loose*).

Position the drum sander along the wall in the direction of the wood grain, with approximately two-thirds of the length of the floor in front of you. Start machine and ease the drum to the floor. Walk slowly forward at an even pace. As you near the wall, gradually raise the drum off the floor. Start pulling the machine backwards as you ease the drum to the floor. Cover the same path previously sanded, raising the drum upon completion of this pass. The next cuts should be done in the same fashion, moving the machine approximately four inches into the unsanded floor area each time.


After a few passes, you will notice your sander's dust bag will start filling up. Stop sanding and empty the dust bag often.

Upon completing the two-thirds portion of the room, turn the machine in the opposite direction and sand the remaining third in the exact same manner, allowing a two- or three-foot overlap of the first cuts. If you start to notice the sanding rate is dropping, your sanding sheet is probably clogged or worn out. Stop sanding and change your sheet. If you continue operating with a worn out or clogged sanding sheet, you will eventually burn or damage your floor!

After you have completed this operation, use the edger machine to sand near walls and in areas where the drum sander won't reach. Move the edger in a brisk, left-to-right, semi-circular motion. (Use the same grit abrasive as used on drum sander.) Hand sand or scrape corners and areas inaccessible by machine. Vacuum the entire floor.

Apply wood putty to any exposed cracks or holes in wood. Allow to dry before proceeding to the next sanding step.

SECOND SANDING: (Fine Abrasive, 80-Grit) Upon completing both drum and edger operations with medium abrasive, repeat the same procedure with the fine abrasive, 80-Grit.

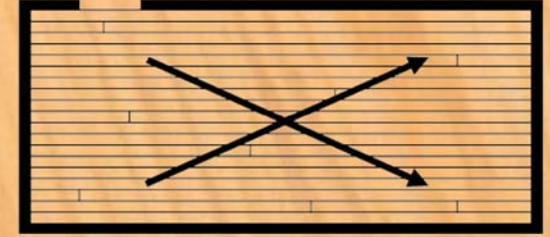

OLD FLOORS

Generous amount of old finish to be removed, and/or uneven floor contours to be corrected

FIRST SANDING: (Coarse Abrasive, 20-Grit) Install sandpaper per machine manufacturer's instructions.

Divide the room into thirds. Place the sander next to a wall facing the direction of the wood grain with two-thirds of the floor in front of you. Start the machine and slowly ease the drum to the floor while walking slowly at an even pace. As you near the wall, gradually raise the drum. Begin pulling the machine backwards as you ease the drum to the floor. Cover the same path previously sanded. Raise the drum upon completion of this pass. Sand the entire floor area in the same direction, overlapping approximately four inches on each new cut until you finish. Move the sander into position so that this operation can be repeated in the opposite direction for the remaining one-third of the room.

If your floor is severely cupped or curled you may need to sand this first cut at a 45-degree angle to the direction of the wood grain (see above diagram). Otherwise, sanding should always be done with the direction of the wood grain.

If you start to notice the sanding rate is dropping, your sanding sheet is probably clogged or worn out. Stop sanding and change the sheet. Failure to change a sheet at this time will eventually lead to burn marks and damage to the floor.

After you have completed this operation, use the edger disc sander to sand near the walls and in areas the drum sander won't reach. Move the edger in a brisk left-to-right, semi-circular motion. (Use the same grit abrasive as used on the drum sander.)

DO NOT attempt to remove 100% of the old finish during this operation. Residual amounts will be removed during subsequent sanding operations. Vacuum the entire floor.

SECOND SANDING: Continue sanding as indicated above, but with a medium abrasive 36-Grit. Apply wood putty to exposed cracks and allow to dry.

THIRD SANDING: Continue sanding as in previous steps, but with a fine abrasive 80-Grit.

Installation of Hook & Loop Sandpaper on the Silver-Line SL-8V2 Floor Sander *No Tools Required!*

Turn off the sander & unplug from outlet

Tilt the SL-8V2 back onto the handle and lift the drum cover for easy installation

Roll the drum around until you locate the metal paper installation slot.

Holding the paper with the grit side out (hook towards the drum), insert the leading edge into the slot. Slide the paper side to side in the slot to ensure it is bottomed out. For proper alignment, the edge of the paper must make contact with the bottom of the slot across the full eight inches (8").

Roll the drum towards the floor and press the paper to the drum, attaching the hook and loop.

Pressing the firmly to the drum.

Press along the whole length of paper, making certain the paper goes on the drum evenly.

The back edge of the paper should end at the metal slot.

Lower the drum cover and return the sander to its upright position resting on the rear of the chassis.

Plug the machine into an outlet, turn it on and slowly lower the drum to the surface being sanded as you walk forward. Lift the drum off the floor as you reach the end of the room, walk backwards on the same path and lower the drum to sand the floor as you return to the other end of the room.
Sand in both directions with the Silver-Line SL-8V2 floor sander!

To remove used paper, pull straight off from edge.

